PORTABLE MP3-CD PLAYER

MCD-SM85
MCD-SF85
MCD-M85

CHANGE NOTES.

-. Total Exploded View and Parts list.

SERVICE Manual

SUPPLEMENT-1

Supplement to the Service Manual MCD-SM85

This supplement contains change notes differing from the Service Manual MCD-SM85 use both this supplement and the Service Manual part number AH68-01154A

PORTABLE MP3-CD PLAYER

CONTENTS

1. Exploded Views and Parts List

- Confidential -

ELECTRONICS

© Samsung Electronics Co.,Ltd. JAN . 2003
Printed in Korea
Code no. AH68-01154A-001

1.Exploded Views and Parts List

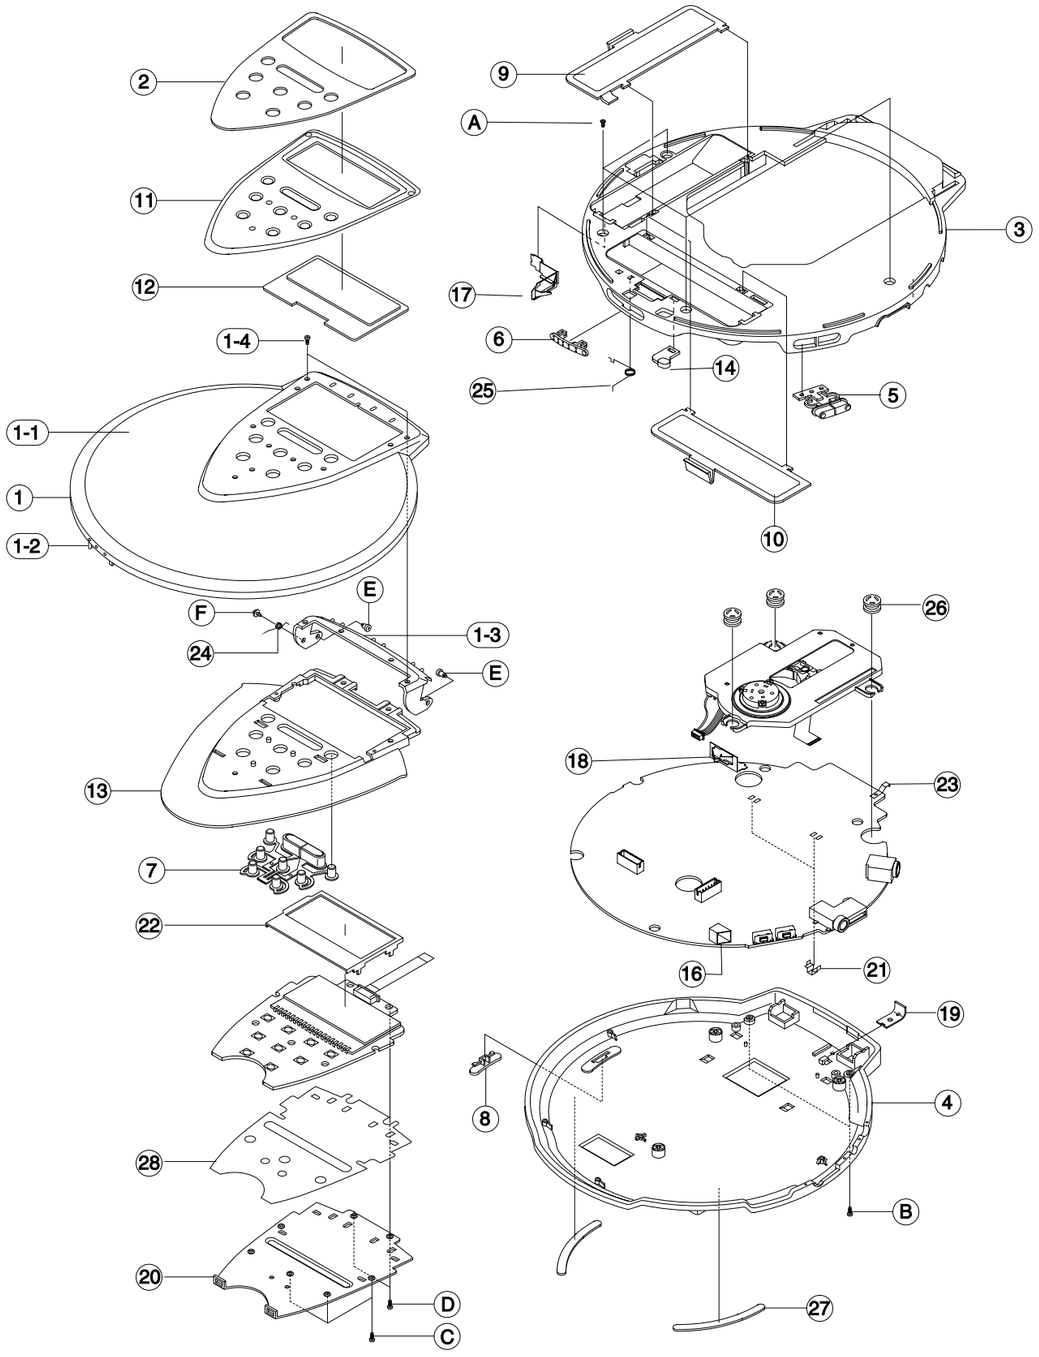

No.	Code No.	Description ;	Specification	Q'TY	Remark
1	AH64-01684C	CABINET-TOP ASSY	ASSY,A1050 SILVER ANODIZING	1	MCD-SM85
	AH64-01684D	CABINET-TOP ASSY	ASSY,A1050 SILVER ANODIZING	1	MCD-SF85
	AH64-01684E	CABINET-TOP ASSY	ASSY,A1050 SILVER ANODIZING	1	MCD-M85
1-1	AH64-01681C	CABINET TOP	AL 0.8T, SILVER ANODIZING	1	MCD-SM85
	AH64-01681D	CABINET TOP	AL 0.8T, SILVER ANODIZING	1	MCD-SF85
	AH64-01681E	CABINET TOP	AL 0.8T, SILVER ANODIZING	1	MCD-M85
1-2	AH64-01683A	LOCKER-DOOR	Zn-D/C, Cr-P	1	
1-3	AH61-00944A	HINGE-BRACKET	Zn-D/C, Cr-P	1	
1-4	6001-001555	SCREW-DOOR	M1.4*1.7,Cr-P	2	
2	AH64-01682C	INLAY-DECO	AL T0.3, HAIR LINE, ANODIZING SILVER	1	MCD-SM85
	AH64-01682D	INLAY-DECO	AL T0.3, HAIR LINE, ANODIZING SILVER	1	MCD-SF85
	AH64-01682E	INLAY-DECO	AL T0.3, HAIR LINE, ANODIZING SILVER	1	MCD-M85
3	AH64-02113C	CABINET-MIDDLE	PC-ABS, SPRAY BLUE	1	MCD-SM85/SF85/M85
4	AH64-01686C	CABINET-BOTTOM	PC-ABS BLUE, SPRAY BLUE	1	MCD-SM85/SF85/M85
5	AH64-02117A	KNOB-VOLUME	ABS NATURAL, Cr-P	1	
6	AH64-01688A	KNOB-OPEN	ABS NATURAL, VACCUM-P	1	
7	AH64-01689A	KNOB-FUNCTION	ABS NATURAL, Cr-P	1	
8	AH64-01606A	KNOB-HOLD	ABS WHT	1	
9	AH64-02115C	LID-BATTERY,A	PC-ABS, SPRAY BLUE	1	MCD-SM85/SF85/M85
10	AH64-02114C	LID-BATTERY,B	PC-ABS, SPRAY BLUE	1	MCD-SM85/SF85/M85
11	AH64-01691A	DECORATION-PLATE	ABS NATURAL, Cr-P	1	
12	AH64-01692A	WINDOW-LCD	PMMA CLR	1	
13	AH61-00945A	HOLDER-DOOR	PC-ABS GRAY	1	
14	AH61-01158A	HOLDER-SWITCH	PC+ABS	1	
16	AH61-01160A	BRACKET-BATTERY(+)	PBS T0.3, Au-P	1	
17	AH61-01159A	BRACKET-BATTERY(+,-)	SUS301 0.2T, Au-P	1	
18	AH61-01161A	BRACKET-BATTERY(-)	SUS301 0.2T, Au-P	1	
19	AH61-00939A	BRACKET-EXT BATT	EGI 1.0T	1	
20	AH61-00940A	BRACKET-FRONT PCB	SECC T0.4	1	
21	AH61-00941A	BRACKET-TERMINAL	PBS, 0.3T, Au-P	2	
22	AH61-00901A	BRACKET-LCD	SPTE-T0.3	1	
23	AH61-01129A	BRACKET-GROUND	PBS, T0.2	1	
24	AH61-00947A	SPRING-DOOR/L	SUS304 •'0.6	1	
25	AH61-01164A	SPRING-OPEN	SUS •'0.3	1	
26	AH73-00045A	RUBBER-DECK	SILICON, BLACK, 30	3	
27	AH73-00027C	RUBBER-FOOT	PORON T1.0, BLK	2	
28	AH63-00392A	SHEET-PCB	PE T0.1, CLR	1	
A	6003-001331	SCREW-TAP TITE CH	1.7*5, Cr-P	5	
B	6003-001332	SCREW-TAP TITE CH	2.0*5, Cr-P	2	
C	AH60-00011R	SCREW-TAP TITE CH	1.7*3, Ni	5	
D	6001-001592	SCREW-MACHINE	M1.7*3, Cr-P	2	
E	6009-001288	SCREW-SPECIAL	M1.4*2.2	2	
F	6009-001295	SCREW-SPECIAL	1.7*3.5, Cr-P	1	